


fumo - latho

Hand Sanitizer Soap Dispenser

Product Manual

Auto Foam Soap Dispenser

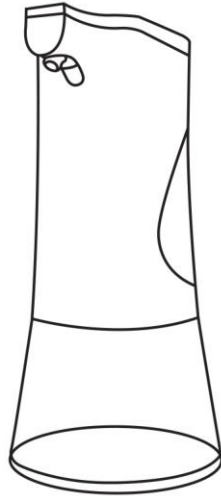

Product Manual

Product Parameters and Function Introduction


Product Name: Auto Foam Soap Dispenser
 Product Model: OS1
 Size: 3.9 x 3.9 x 7.8 inches
 Material: ABS
 Net Weight: 270g
 Liquid Capacity: 350ml
 Rated Voltage: 3.7V
 Rated Power: 3.5W
 Sensing distance: <7cm
 Installation: On table or wall-mounted (free stand offered)

Instructions

1. Press the touch button for 3 seconds with the indicator light flashes and Di-Di- to power on.
 2. Click once to adjust the foam dose gear with Di- and indicator light flashes. Red light is for 10ml and blue for 20ml.
 3. Put your hands into the sensing zone and it dispenses foam immediately.
 4. To power off, press the touch button for 3 seconds again with the indicator light on for seconds and a long Di-.
 5. Red light is on in charging and blue on if fully charged.
- The charging time is about 3-4 hours. Low battery remind function will flash the red light if low power.

Liquid Loading Instructions

This product is suitable for any hand soap and most liquid soap, such as sticky hand soap, dishwashing liquid, facial cleansing milk or other milk. Pour the sticky liquid up to 1/3 of the bottle, and then water up to 2/3. Shake well for diluting.

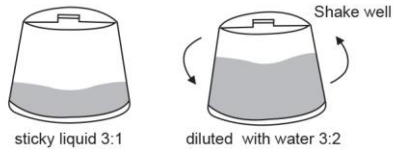

Note: Please do not use sticky liquid directly because it jams the pipe easily. Clean the pipe regularly by pumping the clean water up.

Foaming Sensing Instructions

Put your hands into the sensing zone. Keep hands 5cm away from the spout and the dispenser foams automatically. It foams with a certain dose every time you reach out your hands.

Note: Please do not leave your hands under the sensor or cover it with anything, or it cannot work properly.

Warranty and After-sales Service

6 months warranty from the date of purchase under normal use except for accessories. Please contact the retailer if you have any questions or suggestions. The manufacturer reserves the right for the final interpretation of this manual.

Instructions for After-sales Warranty	
Product Number	
Date of Purchase	
Customer Name	
Main Failure	no power, no foam, no reaction, no charging, others

- Note: Please do not soak the product in water. If the product is damaged for this, it will be man-made failure which is not covered by the warranty.
1. It is strictly prohibited to dismantle the product by yourself.
 2. It is strictly prohibited to break the product, or other improper use.
 3. Don't use liquid of emulsion type or with scrub beads.
 4. Don't use in the environment with a lot of steam.